

IMPORTANT NOTICE: Robert Bosch LLC and the manufacturers whose vehicles are accessible using the CDR System urge end users to use the latest production release of the Crash Data Retrieval system software when viewing, printing or exporting any retrieved data from within the CDR program. Using the latest version of the CDR software is the best way to ensure that retrieved data has been translated using the most current information provided by the manufacturers of the vehicles supported by this product.

CDR File Information

User Entered VIN	JTHBK2625650*****
User	C.J. Medwell
Case Number	
EDR Data Imaging Date	XX/XX/XXXX
Crash Date	XX/XX/XXXX
Filename	JTHBK2625650_2_ACM.CDRX
Saved on	Monday, August XX, XXXX 14/25/36
Collected with CDR version	Crash Data Retrieval Tool 4.1
Reported with CDR version	Crash Data Retrieval Tool 4.1.2
EDR Device Type	Airbag Control Module
Event(s) recovered	Front/Rear (2)

Comments

1. This vehicle was identified as a 2006 Lexus IS250
2. Imaging of this module was undertaken by Bloomberg Consulting Inc. on behalf of their client, XXXX XXXXXXXX.
3. This data should be preserved/saved in the ".cdr" format if it is to be utilized in future litigation.
4. Imaging done by cable direct to module.
5. Some data depends on vehicle's conformity to original specifications: accuracy may be compromised if the vehicle has been modified or has malfunctioned.
6. Data analysis should include comparison to available physical evidence.

Data Limitations

CDR Record Information:

- Due to limitations of the data recorded by the airbag ECU, such as the resolution, data range, sampling interval, time period of the recording, and the items recorded, the information provided by this data may not be sufficient to capture the entire crash.
- Pre-Crash data is recorded in discrete intervals. Due to different refresh rates within the vehicle's electronics, the data recorded may not be synchronous to each other.
- Airbag ECU data should be used in conjunction with other physical evidence obtained from the vehicle and the surrounding circumstances.
- If the airbags did not deploy or the pretensioners did not operate during an event that meets a specified recording threshold, it is called a Non-Deployment Event. Data from a Non-Deployment Event can be overwritten by a succeeding event that meets the specified recording threshold. If the airbag(s) deploy or the pretensioners are operated, it is called a Deployment Event. Deployment Event data cannot be overwritten or deleted by the airbag ECU following that event.
- If power supply to the airbag ECU is lost during an event, all or part of the data may not be recorded.
- "Diagnostic Trouble Codes" are information about faults when a recording trigger is established. Various diagnostic trouble codes could be set and recorded due to component or system damage during an accident.
- The airbag ECU records only diagnostic information related to the airbag system. It does not record diagnostic information related to other vehicle systems.
- The TaSCAN, Global TechStream, or Intelligent Tester II devices (or any other Toyota genuine diagnostic tool) can be used to obtain detailed information on the diagnostic trouble codes from the airbag system, as well as diagnostic information from other systems. However, in some cases, the diagnostic trouble codes of the airbag system recorded by the airbag ECU when the event occurred may not match the diagnostic trouble codes read out when the diagnostic tool is used.

General Information:

- The data recording specifications of Toyota's airbag ECUs are divided into the following six categories. The specifications for 12EDR are designed to be compatible with NHTSA's 49CFR Part 563 rule.
 - 00EDR / 02EDR / 04EDR / 06EDR / 10EDR / 12EDR
- The airbag ECU records data for all or some of the following accident types: frontal crash, rear crash, side crash, and rollover events. Depending on the installed airbag ECU, data for side crash and/or rollover events may not be recorded.
- The airbag ECU records pre-crash data and post-crash data.
 - If a single event occurs independently, the data for that event is recorded on a one-to-one basis.
 - If multiple events occur successively (within a period of approximately 500ms), the establishment of the recording trigger for the first event is defined as the "pre-crash recording trigger". Pre-crash data for the first event and post-crash data for each successive event is then recorded.
 - In some situations, pre-crash data may be re-recorded if an event continues for more than 0.5 seconds.
 - Depending on the installed airbag ECU, pre-crash data may not be recorded.
- The airbag ECU has two recording pages (memory maps) to store pre-crash data. Additionally, to store post-crash data, the airbag ECU has two recording pages for each accident type: two pages for frontal and rear crash, two pages for a side crash, and two pages for rollover event.
- The data recorded by the airbag ECU includes correlating information between each previously occurring event (i.e., information that clarifies the collision event sequence. This correlation information consists of the following items.
 - Time from Previous Pre-Crash TRG

- Linked Pre-Crash Page
- Time from Pre-Crash TRG
- TRG Count
- Previous Crash Type
- The point in time at which the recording trigger is established is regarded as time zero for the recorded data.
- The recording trigger judgment threshold value differs depending on the collision type (i.e., frontal crash, rear crash, side crash, or rollover event).
- Time series data for side crash may have 24 or 25 sampling points.
- Some of the data recorded by the airbag ECU is transmitted to the airbag ECU from various vehicle control modules by the vehicle's Controller Area Network (CAN).
- In some cases, the airbag ECU part number printed on ECU label may not match the airbag ECU part number that CDR tool reported. The part number retrieved by the CDR tool should be considered as the official ECU part number.

Data Definitions:

- The "ON" setting for the "Freeze Signal" indicates a state in which the non-volatile memory can not be overwritten or deleted by the airbag ECU. After "Freeze Signal" has been turned ON, subsequent events will not be recorded.
- "Recording Status" indicates a state in which all recorded event data has been written into the non-volatile memory, or a state in which this process was interrupted and not fully written into the non-volatile memory. If "Recording Status" is "Incomplete", recorded event data may not be valid.
- "Time to Deployment Command" indicates the time from establishment of a recording trigger to a state in which airbag deployment is judged to have occurred. The "Time to Deployment Command" value may differ from the actual time it takes for the airbag to fully deploy.
- Even if an airbag/pretensioner did not deploy due to the "front passenger airbag disable switch and/or "RSCA Disable Switch" in the ON position or other disabling criteria are met, the "Time to deployment command" data element for that airbag/pretensioner may still be recorded.
- "Engine RPM" indicates the number of engine revolutions, not the number of motor revolutions. The recorded value has an upper limit of 5,200 rpm. Resolution is 400 rpm and the value is rounded down and recorded. For example, if the actual engine speed is 799 rpm, the recorded value will be 400 rpm.
- The upper limit for the recorded "Vehicle Speed" value is 122 km/h (75.8mph). Resolution is 2km/h (1.2mph) and the value is rounded down and recorded. The accuracy of the "Vehicle Speed" value can be affected by various factors. These include, but not limited, to the following.
 - Significant changes in the tire's rolling radius
 - Wheel lock and wheel slip
- "Brake Switch" indicates the open/closed state of the brake switch circuit.
- "Accelerator Rate" value is recorded as a voltage. The voltage increases as the driver depresses the accelerator.
- The "Drive" setting for the "Shift Position" value indicates the shift position state is other than "R,"(Reverse), "N" (Neutral), or "P" (Park).
- Depending on the type of occupant sensor installed in the vehicle, one of the following three recording formats for "Occupancy Status, Passenger" will be utilized.
 - Occupied / Not Occupied
 - Adult / Child / Not Occupied
 - AM50 / AF05 / Child / Not Occupied
- "Occupancy Status, Passenger" may not be detected correctly depending on the how the occupant is sitting in the passenger seat and the posture of the occupant.
- "Ignition Cycle Since DTC was Set" records the cumulative amount of times that the ignition is switched ON after an airbag ECU diagnostics code was set for the first time.
- "Airbag Warning Lamp ON Time Since DTC was Set" records the total time that the ignition has been switched ON after the warning lamp was illuminate, due to an airbag ECU fault, for the first time. The resolution is 15 minutes, and the value is rounded down and recorded.
- "Longitudinal Delta-V" indicates the change in forward speed after establishment of the recording trigger. This does not refer to vehicle speed, and it does not include the change in speed during the period from the start of the actual collision to establishment of the recording trigger. If frontal crash, "Longitudinal Delta-V" is negative.
- "Roll Angle peak" may not always match the peak value within the "Roll Angle" sampling points due to differences in data calculation method.
- For "Lateral Delta-V", the direction from the outside to the inside of the vehicle is shown as a positive value.
- For "Lateral Delta-V", the sensor location (B-pillar, front door, C-pillar, and slide door) shows the outline of a typical sensor position. Sensory location can be confirmed using the repair manual.
- For "Lateral Acceleration", the direction from right to left from the viewpoint of the driver facing in the forward direction of the vehicle while sitting in the driver's seat is shown as a positive value.
- "Time from Previous Pre-Crash TRG" indicates the time between the establishment of an event's pre-crash recording trigger to the establishment of a more recent event's pre-crash recording trigger. The upper limit for the recorded value is 16,381 milliseconds. In the event of establishment of the first pre-crash recording trigger after the ignition is switched ON, the upper limit value(max value) is recorded.
- "TRG Count" indicates a calculated value of the number of times recording triggers have been established for all crash types. The sequence in which each event occurred can be verified from the "TRG Count". The smaller the "TRG Count" value, the older the data. The upper limit for the recorded value is 65,533 times.
- "Linked Pre-Crash Page" is used to link "paged" pre-crash data with "paged" post-crash data. When old pre-crash data is overwritten by new pre-crash data, the "Linked Pre-Crash Page" value may record a page number that is not actually linked.
- Resolution of the "Time from Pre-Crash to TRG" is 100 milliseconds, and the value is rounded down and recorded.

05004_ToyotaTMC_r002

System Status at Time of Retrieval

ECU Part Number	89170-53080
ECU Generation	04EDR
Recording Status, All Pages	Complete
Freeze Signal	ON
Freeze Signal Factor	Front Airbag Deployment Front Pretensioner Deployment
Diagnostic Codes Exist	No
Time from Previous Pre Crash TRG (msec)	16381 or greater
Latest Pre-Crash Page	1
Contains Unlinked Pre-Crash Data	No

Event Record Summary at Retrieval


Events Recorded	TRG Count	Crash Type	Time (msec)	Pre-Crash & DTC Data Recording Status	Event & Crash Pulse Data Recording Status
Most Recent Event	2	Front/Rear Crash	0	Complete (Page 1)	Complete (Front/Rear Page 1)
1st Prior Event	1	Front/Rear Crash	-16381 or greater	Complete (Page 0)	Complete (Front/Rear Page 0)

System Status at Event (Most Recent Event, TRG 2)

Recording Status, Front/Rear Crash Info.	Complete
Event Type	Front/Rear Crash
TRG Count (times)	2
Previous Crash Type	No Event
Time from Pre-Crash TRG (msec)	0
Linked Pre-Crash Page	1
Time to Deployment Command, Front Airbag, Driver (msec)	9
Time to Deployment Command, Front Airbag, Passenger (msec)	9
Event Severity Status, Driver	Level 3
Event Severity Status, Passenger	Level 3
Time to Deployment Command, Pretensioner (msec)	9

Longitudinal Crash Pulse (Most Recent Event, TRG 2 - table 1 of 2)

Recording Status, Time Series Data	Complete
Max Longitudinal Delta-V (MPH [km/h])	-38.9 [-62.6]

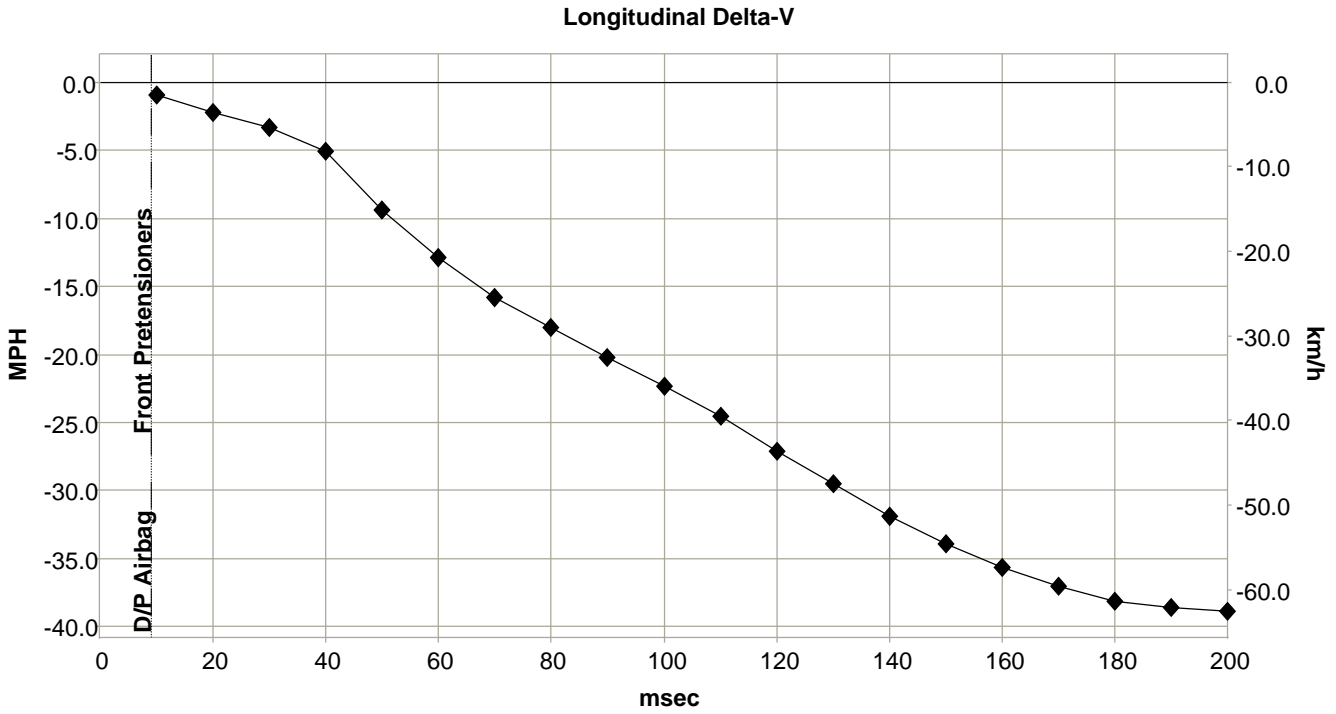

Longitudinal Crash Pulse (Most Recent Event, TRG 2 - table 2 of 2)

Time (msec)	Longitudinal Delta-V (MPH [km/h])
10	-0.9 [-1.4]
20	-2.2 [-3.5]
30	-3.3 [-5.3]
40	-5.1 [-8.2]
50	-9.4 [-15.1]
60	-12.9 [-20.8]
70	-15.8 [-25.4]
80	-18.0 [-29.0]
90	-20.2 [-32.5]
100	-22.3 [-35.9]
110	-24.5 [-39.4]
120	-27.1 [-43.6]
130	-29.5 [-47.5]
140	-31.9 [-51.3]
150	-33.9 [-54.5]
160	-35.7 [-57.4]
170	-37.0 [-59.5]
180	-38.1 [-61.3]
190	-38.6 [-62.1]
200	-38.9 [-62.6]

DTCs Present at Time of Event (Most Recent Event, TRG 2)

Recording Status, Diagnostic	Complete
Ignition Cycle Since DTC was Set (times)	0
Airbag Warning Lamp ON Time Since DTC was Set (min)	0
Diagnostic Trouble Codes	None

Pre-Crash Data, 1 Sample (Most Recent Event, TRG 2)

Recording Status, Pre-Crash/Occupant	Complete
Time from Pre-Crash to TRG (msec)	900
Buckle Switch, Driver	Buckled
Buckle Switch, Passenger	Buckled
Seat Position, Driver	Rearward
Shift Position	Drive

Pre-Crash Data, -5 to 0 seconds (Most Recent Event, TRG 2)


Time (sec)	-4.9	-3.9	-2.9	-1.9	-0.9	0 (TRG)
Vehicle Speed (MPH [km/h])	11.2 [18]	19.9 [32]	27.3 [44]	33.6 [54]	38.5 [62]	43.5 [70]
Brake Switch	OFF	OFF	OFF	OFF	OFF	OFF
Accelerator Rate (V)	3.13	3.13	3.09	3.09	2.89	1.45
Engine RPM (RPM)	2,000	3,600	4,800	4,000	4,000	4,400

System Status at Event (1st Prior Event, TRG 1)

Recording Status, Front/Rear Crash Info.	Complete
Event Type	Front/Rear Crash
TRG Count (times)	1
Previous Crash Type	No Event
Time from Pre-Crash TRG (msec)	0
Linked Pre-Crash Page	0
Time to Deployment Command, Front Airbag, Driver (msec)	Not Commanded
Time to Deployment Command, Front Airbag, Passenger (msec)	Not Commanded
Event Severity Status, Driver	N/A
Event Severity Status, Passenger	N/A
Time to Deployment Command, Pretensioner (msec)	Not Commanded

Longitudinal Crash Pulse (1st Prior Event, TRG 1 - table 1 of 2)

Recording Status, Time Series Data	Complete
Max Longitudinal Delta-V (MPH [km/h])	-3.4 [-5.5]

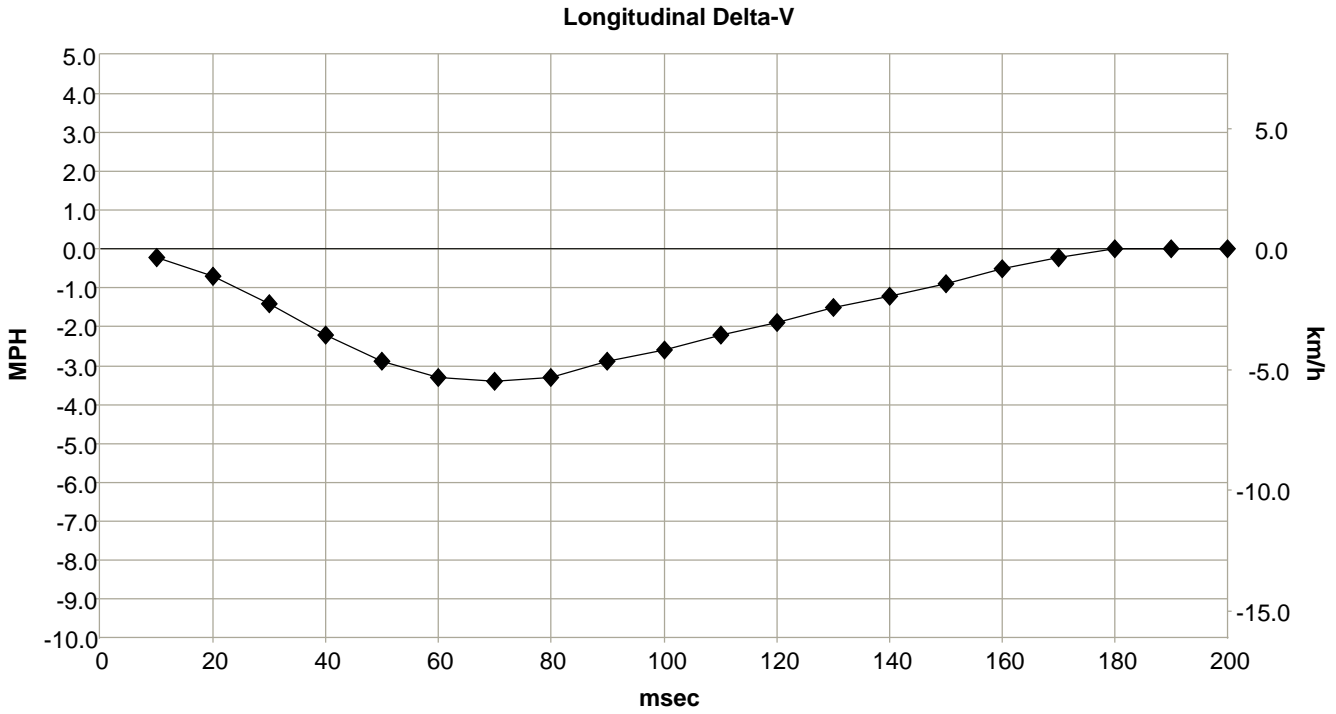

Longitudinal Crash Pulse (1st Prior Event, TRG 1 - table 2 of 2)

Time (msec)	Longitudinal Delta-V (MPH [km/h])
10	-0.2 [-0.3]
20	-0.7 [-1.1]
30	-1.4 [-2.3]
40	-2.2 [-3.5]
50	-2.9 [-4.7]
60	-3.3 [-5.3]
70	-3.4 [-5.5]
80	-3.3 [-5.3]
90	-2.9 [-4.7]
100	-2.6 [-4.2]
110	-2.2 [-3.5]
120	-1.9 [-3.1]
130	-1.5 [-2.4]
140	-1.2 [-1.9]
150	-0.9 [-1.4]
160	-0.5 [-0.8]
170	-0.2 [-0.3]
180	0.0 [0.0]
190	0.0 [0.0]
200	0.0 [0.0]

DTCs Present at Time of Event (1st Prior Event, TRG 1)

Recording Status, Diagnostic	Complete
Ignition Cycle Since DTC was Set (times)	0
Airbag Warning Lamp ON Time Since DTC was Set (min)	0
Diagnostic Trouble Codes	None

Pre-Crash Data, 1 Sample (1st Prior Event, TRG 1)

Recording Status, Pre-Crash/Occupant	Complete
Time from Pre-Crash to TRG (msec)	500
Buckle Switch, Driver	Buckled
Buckle Switch, Passenger	Buckled
Seat Position, Driver	Rearward
Shift Position	Drive

Pre-Crash Data, -5 to 0 seconds (1st Prior Event, TRG 1)

Time (sec)	-4.5	-3.5	-2.5	-1.5	-0.5	0 (TRG)
Vehicle Speed (MPH [km/h])	5 [8]	7.5 [12]	5 [8]	3.7 [6]	3.7 [6]	5 [8]
Brake Switch	OFF	ON	ON	OFF	OFF	ON
Accelerator Rate (V)	1.25	0.78	0.78	0.78	1.21	1.17
Engine RPM (RPM)	1,200	1,200	400	400	1,200	1,200

Disclaimer of Liability

The users of the CDR product and reviewers of the CDR reports and exported data shall ensure that data and information supplied is applicable to the vehicle, vehicle's system(s) and the vehicle ECU. Robert Bosch LLC and all its directors, officers, employees and members shall not be liable for damages arising out of or related to incorrect, incomplete or misinterpreted software and/or data. Robert Bosch LLC expressly excludes all liability for incidental, consequential, special or punitive damages arising from or related to the CDR data, CDR software or use thereof.